

1.6 □ Keypad Digital Display (7-segment type)

The 7-segment display provides visual readout of system status. The display indicates zones in alarm, troubled zones, bypassed zones, and also displays the following confirmation letters:

Display	Description	Function
A	Up & Download	Modem 'Answer Now' function selected. Confirms after holding-down key 6 then key 1. 'A' also displayed upon Auto-Arming programming
C	Communication	Tests dialer, and displays telephone numbers upon holding-down key 6
C	Communication	C flashing in display indicates telephone line trouble
c	Chime	Upon entering Chime mode via key 5, 'c' confirms Chime mode
c	Closing	Indicates closing of the system (Arming) followed by user number when events log is displayed
d	Delay Delete	Upon holding-down key 4, to operate Delay Delete of delayed and follower zones
P	Dial Delay	When programming a telephone number that requires an inter-digit delay ('Pause') during dialing. (Delay duration is 2 seconds)
E	Error	Indicates programming error
h	Home	Indicates entering of Group Bypass
h	Hour	Displayed after power-up to remind installer to set the system time: 'h' will be removed after time setting (using keys 0 and 1)
H	Hold-Up	Upon Panic triggering from Keypad, or Panic zone alarm
o	Opening	Indicates system opening (Disarming). Followed by user number when events log is displayed
L	Low Battery	Low battery indication upon system arming, or during Disarmed mode
P	Program	System is in programming mode
t	Tamper	Indicates zone's Tamper alarm
U	Update	Confirms programming updating
u	User	'u' (user) followed by user number when events log is displayed and system is in user code programming mode
≡	Arming Denied or AC Fail	≡ Displayed upon Arming attempt with non-delayed (instant) zones in trouble.